



Podešavanje vremena sati i minuti

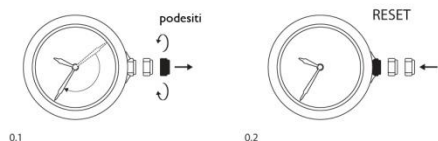


Podešavanje dana

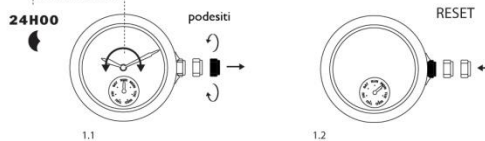


Podešavanje datuma

napomena: datum ne podešavati u vremenu između 21h i 3h

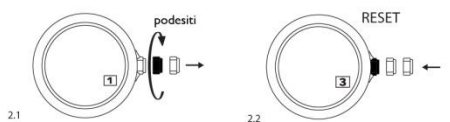


Podešavanje ALARMA

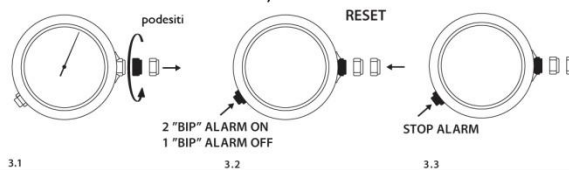


Merenje vremena hronografom

nakon 2 sata konstantnog merenja hronograf se automatski zaustavlja i resetuje kako bi sačuvaao bateriju

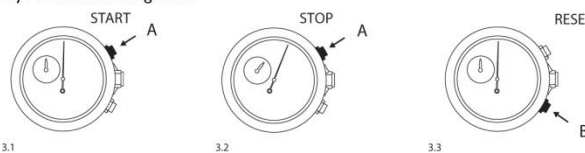

Merenje prolaznog vremena

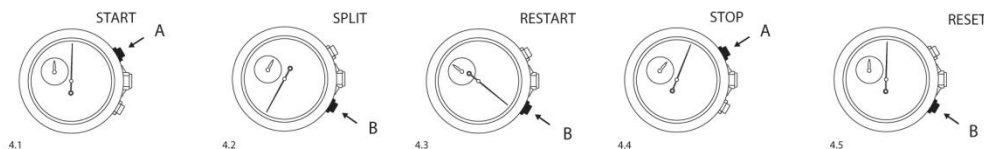

Korekcija položaja kazaljki

resetovanje hronografa, korekcija položaja kazaljki hronografa za minute i sekunde

